


AIRCRAFT PARKING / DOCKING CHART - ICAO

TWR	GND	De-icing
118.600	121.800	127.025
118.850	118.125	133.850

HELSINKI-VANTAA AERODROME  
HELSINKI, FINLAND

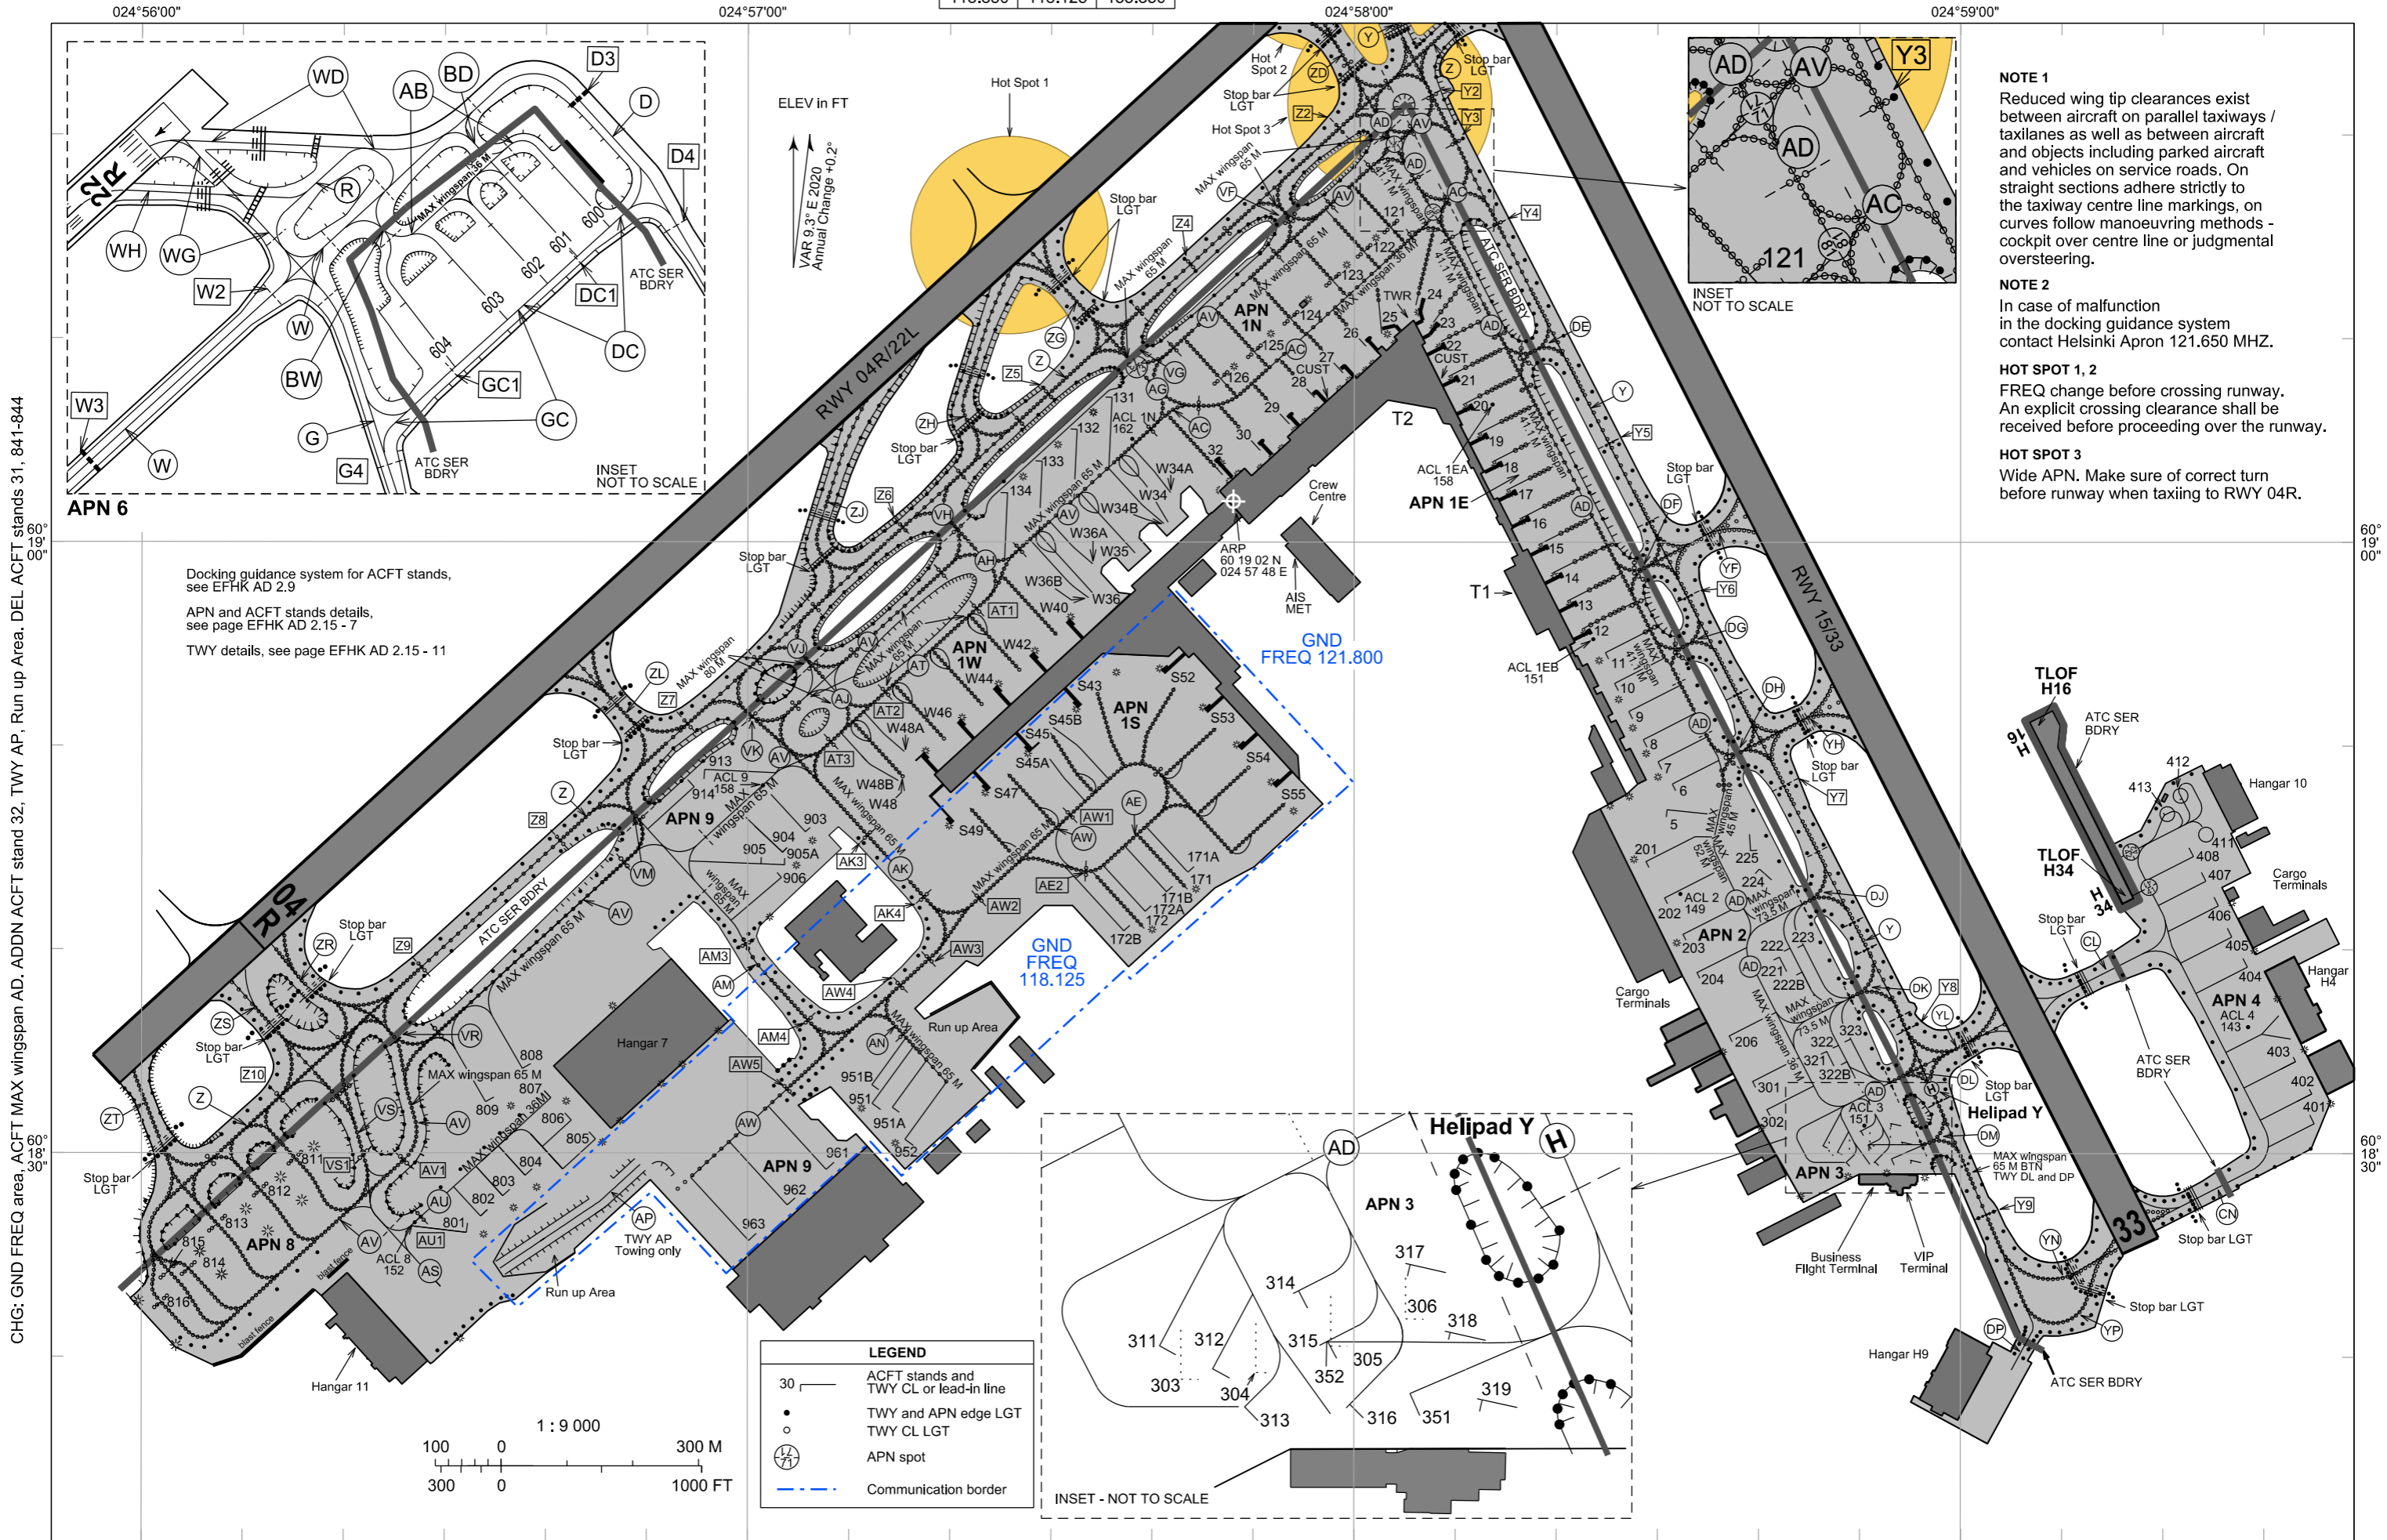

**NOTE 1**  
Reduced wing tip clearances exist between aircraft on parallel taxiways / taxilanes as well as between aircraft and objects including parked aircraft and vehicles on service roads. On straight sections adhere strictly to the taxiway centre line markings, on curves follow manoeuvring methods - cockpit over centre line or judgmental oversteering.

**NOTE 2**  
In case of malfunction in the docking guidance system contact Helsinki Apron 121.650 MHZ.

**HOT SPOT 1, 2**  
FREQ change before crossing runway. An explicit crossing clearance shall be received before proceeding over the runway.

**HOT SPOT 3**  
Wide APN. Make sure of correct turn before runway when taxiing to RWY 04R.

CHG: GND FREQ area, ACFT MAX wingspan AD, ADDN ACFT stand 32, TWY AP, Run up Area, DEL ACFT stands 31, 841-844